


# Tuff Span®

## 2.67 Corrugated

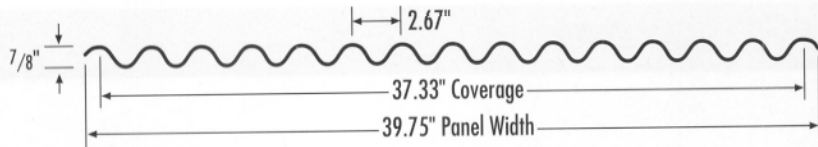

### ROOFING: POSITIVE LOADS FASTENERS REQUIRED AT EVERY THIRD CORRUGATION

S E R I E S	UNIFORM LOADS, PSF	20			25			30			35			40			50		
		SPAN			SPAN			SPAN			SPAN			SPAN			SPAN		
		SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE
FR 200	3'9"	5'1"	4'8"	3'6"	4'8"	4'4"	3'3"	4'5"	4'1"	3'1"	4'2"	3'10"	3'0"	3'11"	3'8"	2'9"	3'2"	3'5"	
FR 300	4'1"	5'6"	5'1"	3'10"	5'2"	4'9"	3'7"	4'10"	4'5"	3'5"	4'7"	4'3"	3'3"	4'5"	4'1"	3'0"	4'1"	3'9"	
FR 400	4'3"	5'8"	5'3"	3'11"	5'3"	4'10"	3'8"	4'11"	4'7"	3'6"	4'8"	4'4"	3'4"	4'6"	4'2"	3'1"	4'2"	3'10"	

### ROOFING: NEGATIVE LOADS FASTENERS REQUIRED AT EVERY THIRD CORRUGATION

S E R I E S	UNIFORM LOADS, PSF	20			25			30			35			40			50		
		SPAN			SPAN			SPAN			SPAN			SPAN			SPAN		
		SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE
FR 200	3'9"	5'1"	4'8"	3'6"	4'8"	4'4"	3'3"	4'5"	4'1"	3'1"	4'2"	3'10"	3'0"	3'11"	3'8"	2'9"	3'2"	3'5"	
FR 300	4'1"	5'6"	5'1"	3'10"	5'2"	4'9"	3'7"	4'10"	4'5"	3'5"	4'7"	4'3"	3'3"	4'5"	4'1"	3'0"	4'1"	3'9"	
FR 400	4'3"	5'8"	5'3"	3'11"	5'3"	4'10"	3'8"	4'11"	4'7"	3'6"	4'8"	4'4"	3'4"	4'6"	4'2"	3'1"	4'2"	3'10"	

### SIDING: WIND LOADS FASTENERS REQUIRED AT EVERY THIRD CORRUGATION

S E R I E S	UNIFORM LOADS, PSF	20			25			30			35			40			50		
		SPAN			SPAN			SPAN			SPAN			SPAN			SPAN		
		SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE	SINGLE	TWO	THREE
FR 200	4'9"	6'5"	5'11"	4'5"	5'11"	5'6"	4'2"	5'3"	5'2"	3'11"	4'6"	4'11"	3'9"	3'11"	4'6"	3'6"	3'2"	3'7"	
FR 300	5'2"	7'0"	6'5"	4'10"	6'6"	6'0"	4'7"	6'1"	5'7"	4'4"	5'10"	5'4"	4'1"	5'6"	5'1"	3'10"	4'9"	4'9"	
FR 400	5'4"	7'2"	6'7"	4'11"	6'8"	6'2"	4'8"	6'3"	5'9"	4'5"	5'11"	5'6"	4'3"	5'8"	5'3"	3'11"	5'3"	4'10"	

Contact Enduro for SERIES FM Loads/Span Data